

# Kit 1427

**TOYOTA Belta (Mk.II)**, 4-dr Sedan, 05-10

**TOYOTA Vios (Mk.II)**, 4-dr Sedan, 05-11

**TOYOTA Vitz**, 5-dr Hatchback, 05-09

**TOYOTA Vitz**, 5-dr Hatchback, 10-

 
**TOYOTA Yaris (Mk.II)**, 4-dr Sedan, 05-11

**TOYOTA Yaris**, 4-dr Sedan, \*07-11



**TOYOTA Yaris**, 5-dr Hatchback, 05-11 / \*07-11

**TOYOTA Yaris**, 5-dr Hatchback, 12-


\*North America

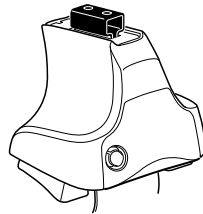

  **754** Rapid System  
**480R** Rapid Traverse (North America)

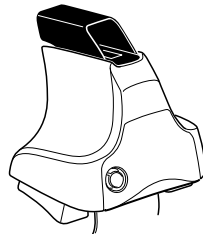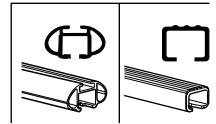

**480** Traverse (North America)

 


**754 Rapid System**  
**480R Rapid Traverse (North America)**

**480 Traverse (North America)**

 (North America)

**Kit**



1

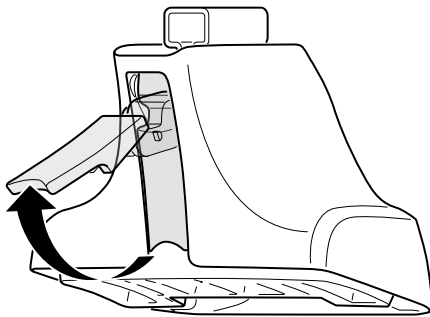




2



 
 
754 Rapid System  
480R Rapid Traverse  
(North America)

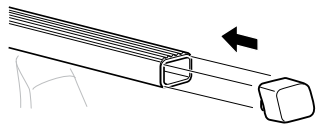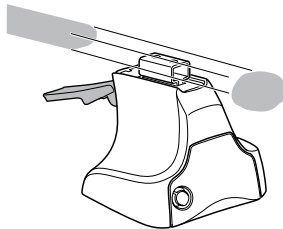

x4

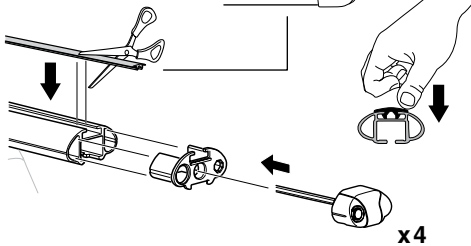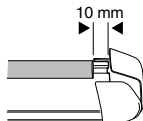   



x4

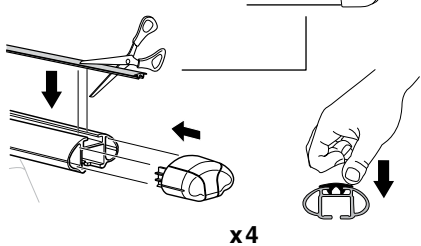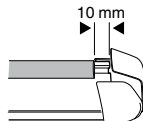  



x4



  480 Traverse  
(North America)

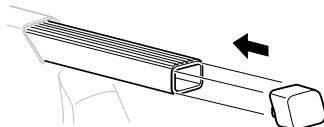
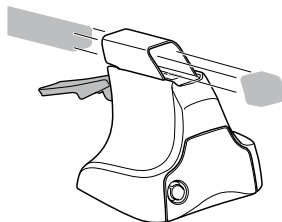


x4

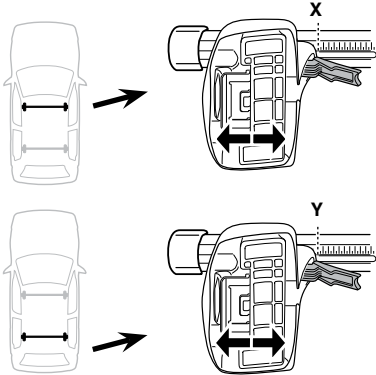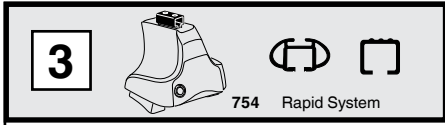  


	X
TOYOTA Belta (Mk.II), 4-dr Sedan, 05-10	26,5
TOYOTA Vios (Mk.II), 4-dr Sedan, 05-11	26,5
TOYOTA Vitz, 5-dr Hatchback, 05-09	28,5
TOYOTA Vitz, 5-dr Hatchback, 10-	26,5
TOYOTA Yaris (Mk.II), 4-dr Sedan, 05-11	26,5
TOYOTA Yaris, 4-dr Sedan, *07-11	26,5
TOYOTA Yaris, 5-dr Hatchback, 05-11 / *07-11	28,5
TOYOTA Yaris, 5-dr Hatchback, 12-	26,5

	Y
TOYOTA Belta (Mk.II), 4-dr Sedan, 05-10	26
TOYOTA Vios (Mk.II), 4-dr Sedan, 05-11	26
TOYOTA Vitz, 5-dr Hatchback, 05-09	24,5
TOYOTA Vitz, 5-dr Hatchback, 10-	24,5
TOYOTA Yaris (Mk.II), 4-dr Sedan, 05-11	26
TOYOTA Yaris, 4-dr Sedan, *07-11	26
TOYOTA Yaris, 5-dr Hatchback, 05-11 / *07-11	24,5
TOYOTA Yaris, 5-dr Hatchback, 12-	24,5

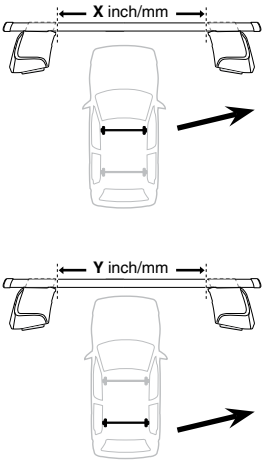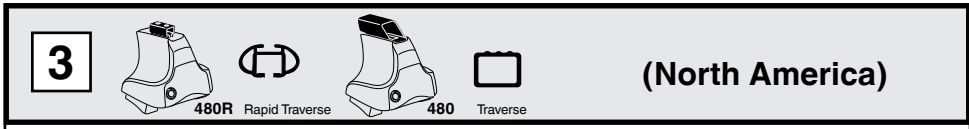  

	X inch	X mm
TOYOTA Belta (Mk.II), 4-dr Sedan, 05-10	36 1/8"	916 mm
TOYOTA Vios (Mk.II), 4-dr Sedan, 05-11	36 1/8"	916 mm
TOYOTA Vitz, 5-dr Hatchback, 05-09	36 7/8"	936 mm
TOYOTA Vitz, 5-dr Hatchback, 10-	36 1/8"	916 mm
TOYOTA Yaris (Mk.II), 4-dr Sedan, 05-11	36 1/8"	916 mm
TOYOTA Yaris, 4-dr Sedan, *07-11	36 1/8"	916 mm
TOYOTA Yaris, 5-dr Hatchback, 05-11 / *07-11	36 7/8"	936 mm
TOYOTA Yaris, 5-dr Hatchback, 12-	36 1/8"	916 mm

	Y inch	Y mm
TOYOTA Belta (Mk.II), 4-dr Sedan, 05-10	35 7/8"	911 mm
TOYOTA Vios (Mk.II), 4-dr Sedan, 05-11	35 7/8"	911 mm
TOYOTA Vitz, 5-dr Hatchback, 05-09	35 1/4"	896 mm
TOYOTA Vitz, 5-dr Hatchback, 10-	35 1/4"	896 mm
TOYOTA Yaris (Mk.II), 4-dr Sedan, 05-11	35 7/8"	911 mm
TOYOTA Yaris, 4-dr Sedan, *07-11	35 7/8"	911 mm
TOYOTA Yaris, 5-dr Hatchback, 05-11 / *07-11	35 1/4"	896 mm
TOYOTA Yaris, 5-dr Hatchback, 12-	35 1/4"	896 mm

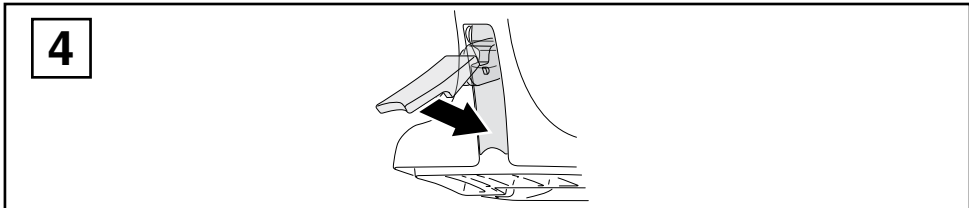 


**5****TOYOTA Belta (Mk.II)**, 4-dr Sedan, 05-10**TOYOTA Vios (Mk.II)**, 4-dr Sedan, 05-11**TOYOTA Vitz**, 5-dr Hatchback, 05-09**TOYOTA Vitz**, 5-dr Hatchback, 10-**TOYOTA Yaris (Mk.II)**, 4-dr Sedan, 05-11**TOYOTA Yaris**, 4-dr Sedan, \*07-11**TOYOTA Yaris**, 5-dr Hatchback, 05-11 / \*07-11**TOYOTA Yaris**, 5-dr Hatchback, 12-


229



 
745



228

 


745

 


23




 
860




24

 


860

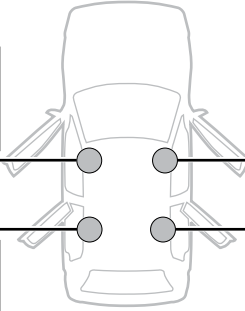  





A

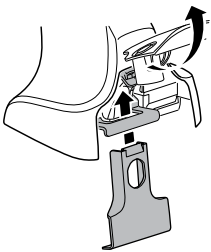 


B

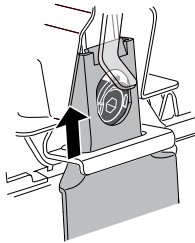 


C

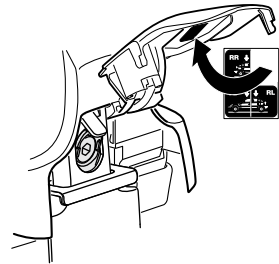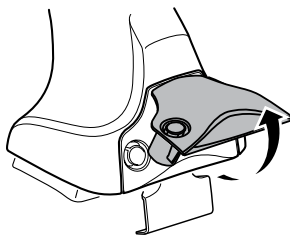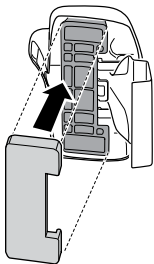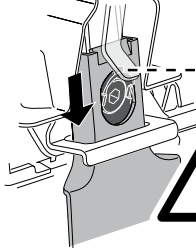    


6

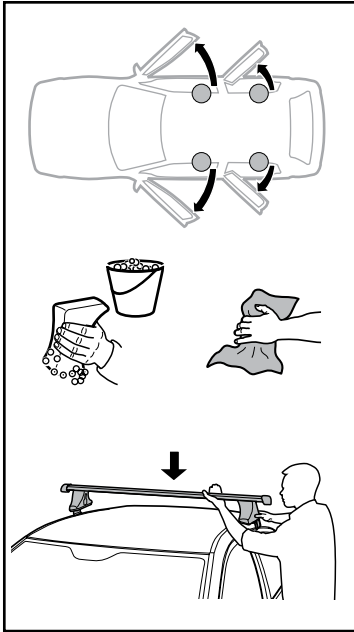 

i

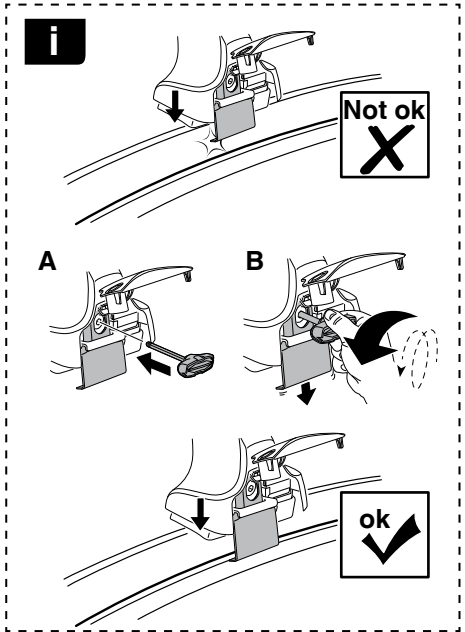 

	X mm	Y mm	X inch	Y inch
TOYOTA Belta (Mk.II), 4-dr Sedan, 05-10	190 mm	710 mm	7 1/4"	28"
TOYOTA Vios (Mk.II), 4-dr Sedan, 05-11	190 mm	710 mm	7 1/4"	28"
TOYOTA Vitz, 5-dr Hatchback, 05-09	130 mm	710 mm	5 1/8"	28"
TOYOTA Vitz, 5-dr Hatchback, 10-	190 mm	710 mm	7 1/4"	28"
TOYOTA Yaris (Mk.II), 4-dr Sedan, 05-11	190 mm	710 mm	7 1/4"	28"
TOYOTA Yaris, 4-dr Sedan, *07-11	190 mm	710 mm	7 1/4"	28"
TOYOTA Yaris, 5-dr Hatchback, 05-11 / *07-11	130 mm	710 mm	5 1/8"	28"
TOYOTA Yaris, 5-dr Hatchback, 12-	190 mm	710 mm	7 1/4"	28"

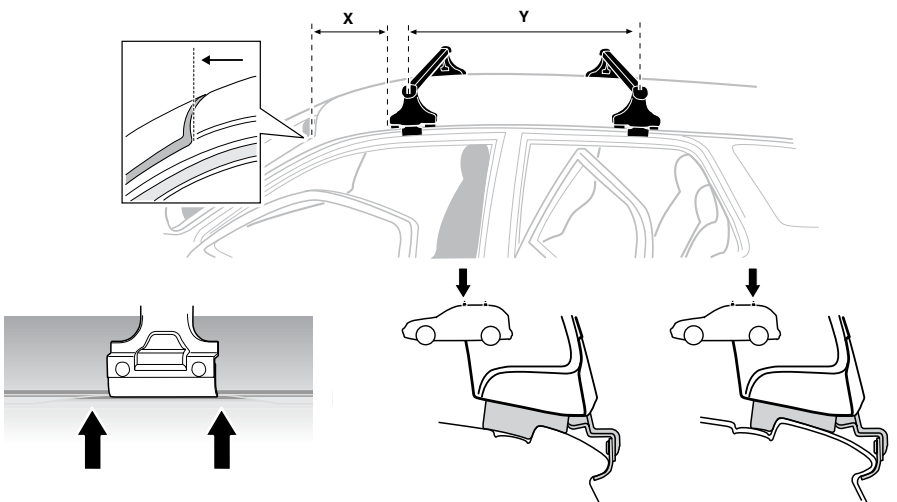 

7



GB/US Tighten alternately  
 D Die Schrauben abwechselnd anziehen  
 F Serrer alternativement chaque côté  
 NL Afwisselend aan de linker- en de rechterkant aandraaien  
 I Alternare il serraggio delle viti  
 E Apertar alternativamente  
 PT Aperte alternadamente  
 S Dra åt växelvis  
 FIN Kierrä vuorotellen  
 EST Pinguldage vaheldumisi  
 LAT Pieļieciet pamišus  
 LIT Užsukinėkite pakaitomis  
 PL Śruby dokręcaj naprzemiennie  
 RU Затягивайте попеременно

 
CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.  
 SK Dofahajte striedavo  
 SLO Privijajte izmenično.  
 HR Naizmjerno zategnite  
 HU Egymástól függetlenül szorítandó  
 GR Σφιγίγες εναλλάξ  
 TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。



ไทย ชันในแบบสลับ


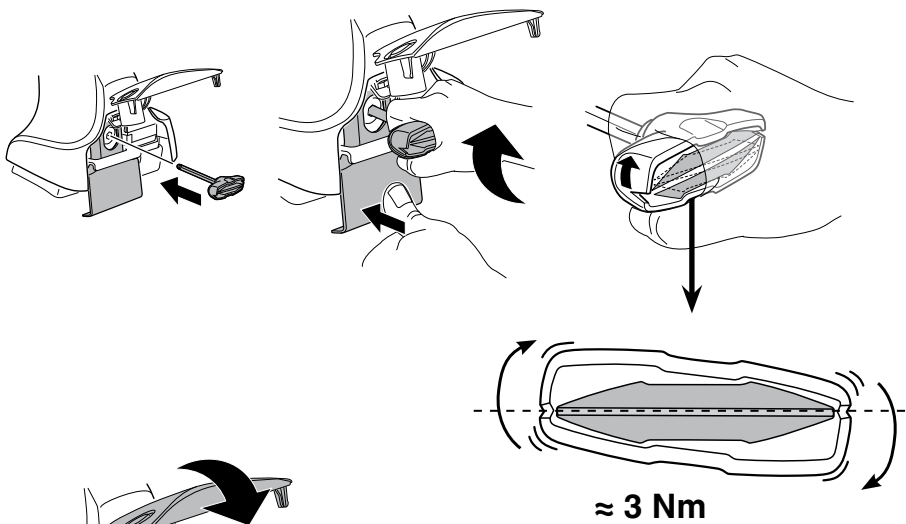


8



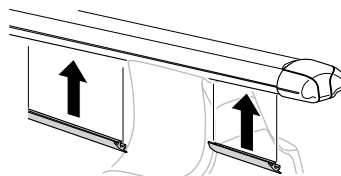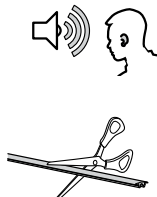  




x1  
17 mm

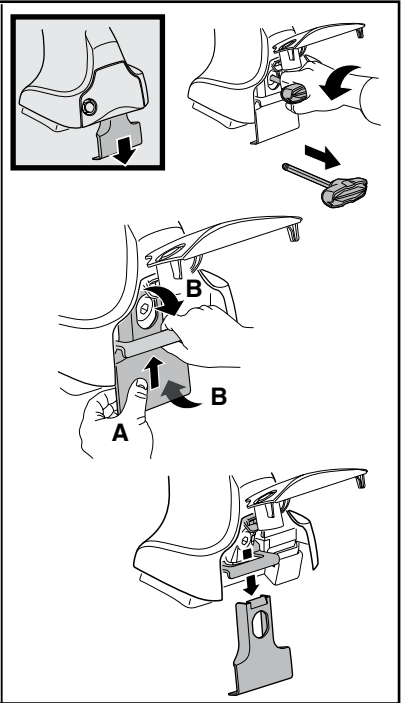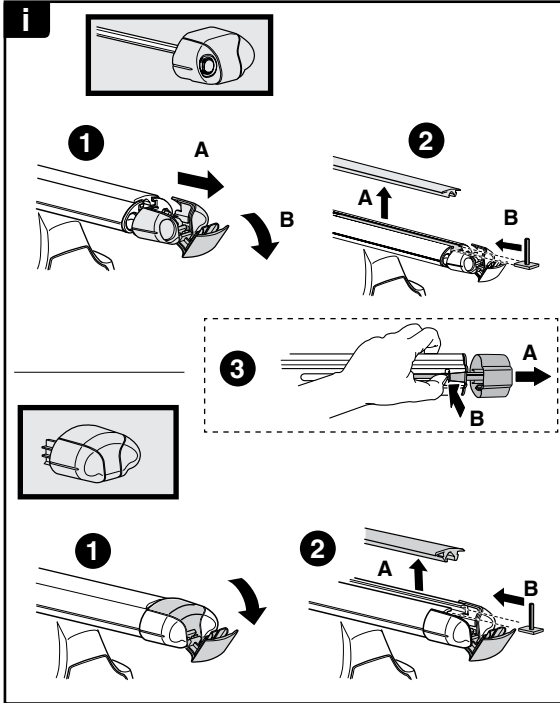




   **THULE**  
SWEDEN  
**ONE  
KEY  
SYSTEM**



 -  **544** (x4)
  -  **596** (x6)
  -  **588** (x8)
  -  **510** (x10)
  -  **452** (x12)
- NA  
EUR  
ASIA

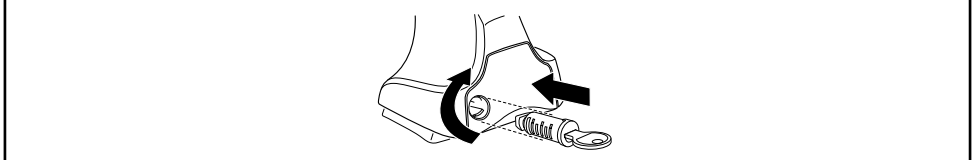

WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN  
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com  
customer.service@thule.com

 www.thule.com